

## upper diagram

## schematic diagram of winch loop used in SAILSetc boats with RMG or Whirlwind winches from December 2005 onwards

- attached to the lower section of the drum. The return line should be attached to the upper section of the drum. Double drum of winch. The line going forward should be
- pass through a 52a fairlead and out of the hull. After passing through the 67g fairlead moulding the sheets each

## lower diagram

## schematic diagram of winch loop used in SAILSetc boats with Hitec servo sail control

- Wire rod each sheet is attached to the loop in the forward end.
- A loop of elastic pulls the wire rod forward.
- Adjustment line use D75 and 57b attached to solid point in hull.
- pass through a 52a fairlead and out of the hull After passing through the 67g fairlead moulding the sheets each